

MALFUNCTION CODE	DETECTED ITEM	DETECTED FAILURE CONDITION
		CHECK FOR
C24 / C25	Ignition coil (IG coil), NO.1 / NO.2	Ignition signal is interrupted continuous by 32 times or more when ECU confirm ignition surge at each combustion chamber, C24 or C25 is indicated.
		Ignition coil, wiring / coupler connection, power supply from the battery.
C31	Gear position switch (GP switch)	It judges from gear position voltage, engine speed and throttle position by ECU, when the gear position voltage is 0.1 V and less.
		Gear position switch, wiring / coupler connection, gearshift cam etc.
C32 / C33	Fuel injector, NO.1 / NO.2	Injector signal is interrupted continuous by 16 times or more when ECU confirm injector running surge at each combustion chamber, C32 or C33 is indicated.
		Injector, wiring / coupler connection, power supply to the injector.
C41	Fuel pump relay	Voltage is applied continuous over 5 sec., battery voltage $\geq 5$ V when fuel pump relay is "OFF" position or battery voltage $< 5$ V when fuel pump relay is "ON" position.
		Fuel pump relay, connecting lead wire, power source to fuel pump relay, fuel injector.